

# HANDI-SPA PAD

## INSTALLATION INSTRUCTIONS

Tools required:  
Flat Shovel, Level, Straight 2x4x8

To make an 8' x 8' square pad you will need 2 cartons [6 pads]

To make an 8' x 12' rectangular pad you will need 3 cartons [9 pads]

To make an 10'-8" x 12' rectangular pad you will need 4 cartons [12 pads]

---

The Handi-Spa Pad is an all plastic pad measuring 32" x 48" that can be connected together with the supplied connectors to form a flat platform for placement of spa.

The Handi-Spa Pad can be drilled through to run electrical conduit if needed.

The Handi-Spa Pad can be placed directly on the soil, on concrete, or on a wooden deck.

Simple one person installation - No need to assemble and flip over. Simply place the first pad on the level soil then add rest of pads one at a time to complete spa pad.

## INSTALLATION

Start the installation by removing all of the sod and leveling the soil surface. With level placed on top of the straight 2x4x8' finish leveling the soil surface. Finally tamp the soil down to create a firm level base.

[Sand is not necessary but may be used to help with leveling.]

NOTE: The pads are placed "waffle" side down. Remove all of the connectors from the bottom of the spa pads and set aside.

When installing the spa pads the connectors will be used to hold the pads together. They will be installed on the underside [waffle side] of the spa pad at the edges. Not all of the connectors will be used.

Start with one of the spa pads and attach two connectors to the underside of the short bottom edge and two connectors to the underside of the long right edge of the pad, place pad on the ground in position #1.

[see diagram next page]


For the next spa pad attach two connectors to the underside of the short bottom edge and two connectors to the underside of the long right edge of the pad. Place pad in position #2 right next to the first pad, overlapping the connectors on the first pad.

On the third spa pad only attach two connectors to the underside of the short bottom edge of the pad. Place pad in position #3 right next to the second pad, overlapping the connectors from the second pad.


Install the fourth and fifth spa pads by attaching two connectors to the underside of the long right edges on each pad. Place pads in positions #4 and #5, overlapping the connectors from the pads next to them.

Finish by placing the last spa pad in position #6, overlapping the connectors from the pad above and next to it.

Once installation is complete, carefully lower the spa onto the pads.

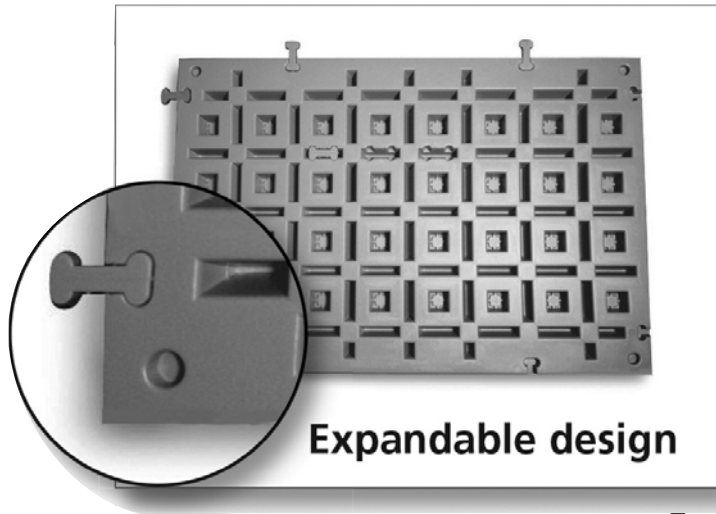

## Connector Locations for 8' x 8' Spa Pad

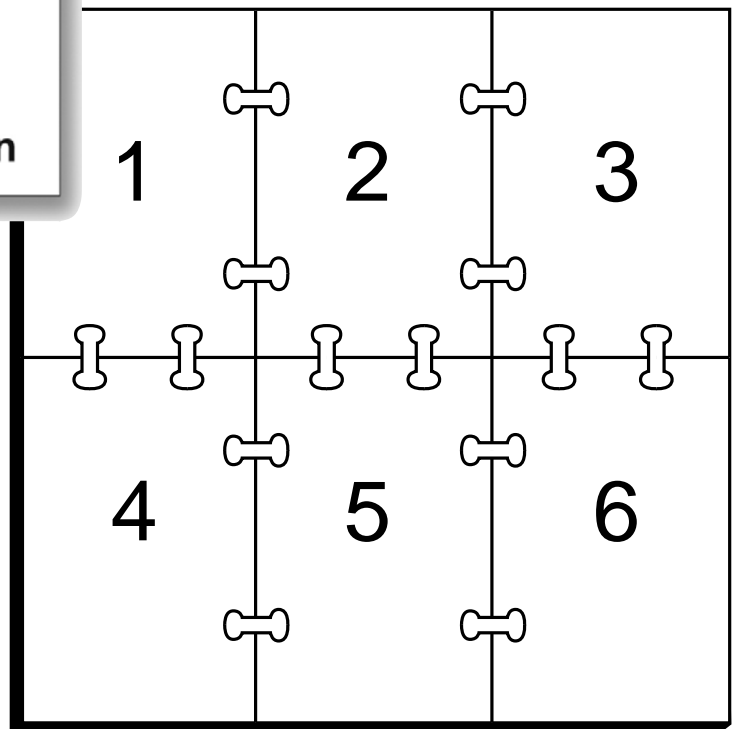

Warranty: The Handi-Spa Pad is warranted by the manufacturer to be free from manufacturing defects for a period of FIVE [5] years from date of purchase



MADE IN THE U.S.A. by:  
**CONFER**  
*plastics inc.*

97 Witmer Road  
North Tonawanda, NY 14120-2421  
Toll Free U.S. 800-635-3213  
FAX: 716-694-3102  
[www.conferplastics.com](http://www.conferplastics.com)