


SPAESCORT™ Entry Rail • UnderMount #8251

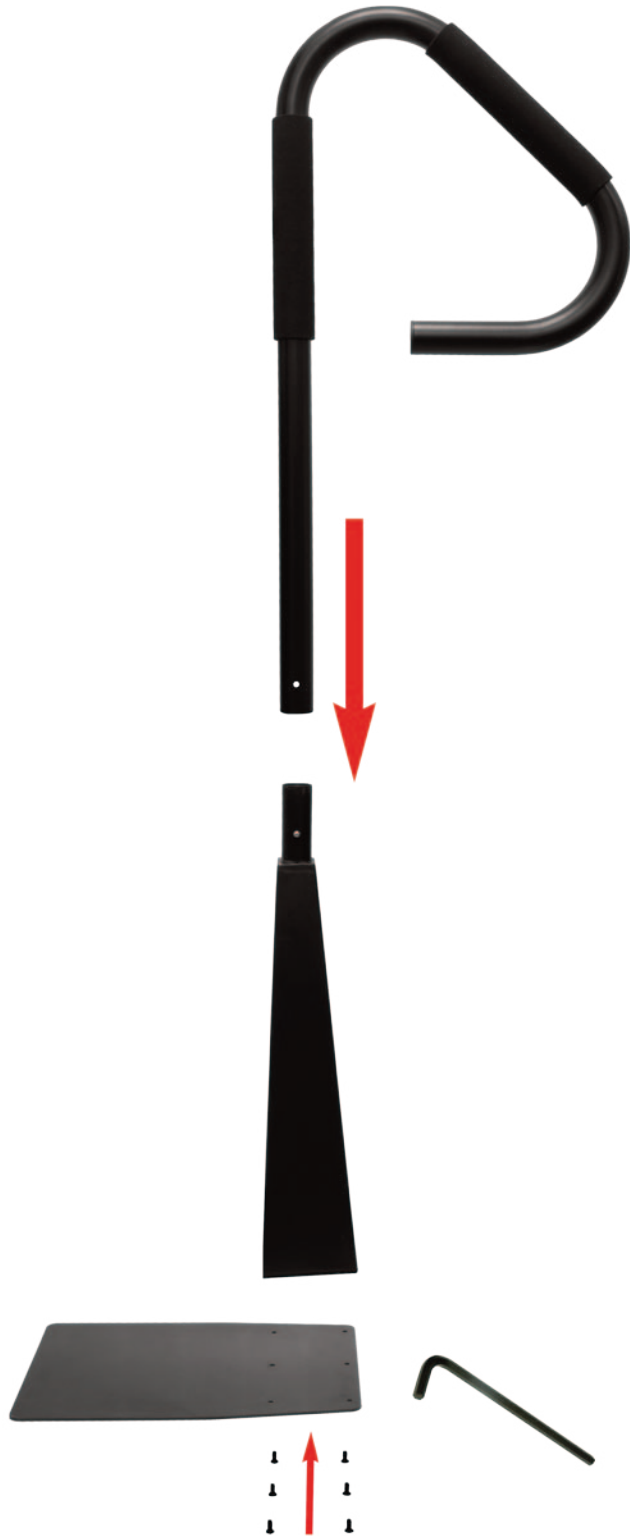

PARTS LIST:

- (1) Upper Entry Handle
- (1) Lower Base Unit
- (1) UnderMount Plate
- (1) Hardware Kit
 - 6 Allan Screws
 - 1 Allan Wrench

ASSEMBLY:

1. Attach the UNDERMOUNT PLATE to the LOWER BASE UNIT using the (6) Allan screws.
2. Slide ENTRY HANDLE onto BASE UNIT until it locks in place.
3. Place in desired location under an empty spa then fill the spa with water.

Manufactured for:

ESSENTIALS

Essentials is an industry leader in spa accessory and maintenance products. To view our complete product offering, visit us at:
www.Essentials-SpaSupplies.com

All items can be ordered through your local retailer.

©2024 ESSENTIALS - Cumming, GA 30041